

Corrected to NOVEMBER 1960

PARTS LIST No. 5537


KODAK RETINA IIc, IIIc, and IIIC CAMERAS AND KODAK RETINA FIELD CASE, MODEL B

This revised parts list supersedes models IIc and IIIc covered in Parts List No. 5517. Parts common to all models are identified by part number and name only. Parts not common to all models are identified by the model reference.



**ORDER PARTS FROM APPARATUS PARTS SERVICE
EASTMAN KODAK COMPANY, ROCHESTER 4, N.Y.**

KODAK RETINA IIc, IIIc, and IIIc CAMERAS

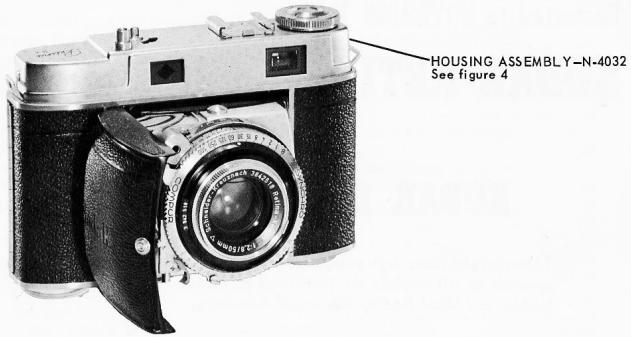

KODAK RETINA IIc

HOUSING ASSEMBLY-N-4096
See figure 4



KODAK RETINA IIIc, Old Style

HOUSING ASSEMBLY-N-4735
See figure 4



KODAK RETINA IIIc, New Style

METER ASSEMBLY
Old Style—N-4503
New Style—N-4883
See figure 4A



KODAK RETINA IIIc

HOUSING ASSEMBLY-N-4781
See figure 4

Always give PART NUMBER and NAME when ordering parts

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

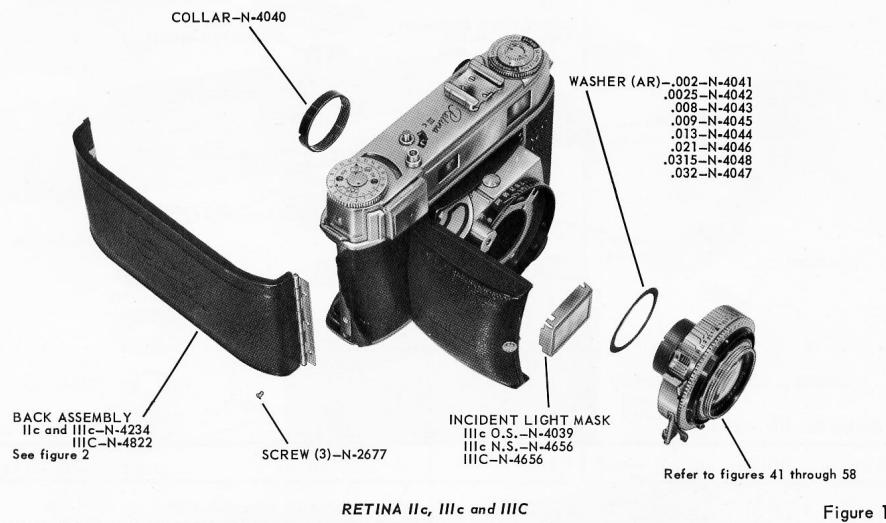


Figure 1


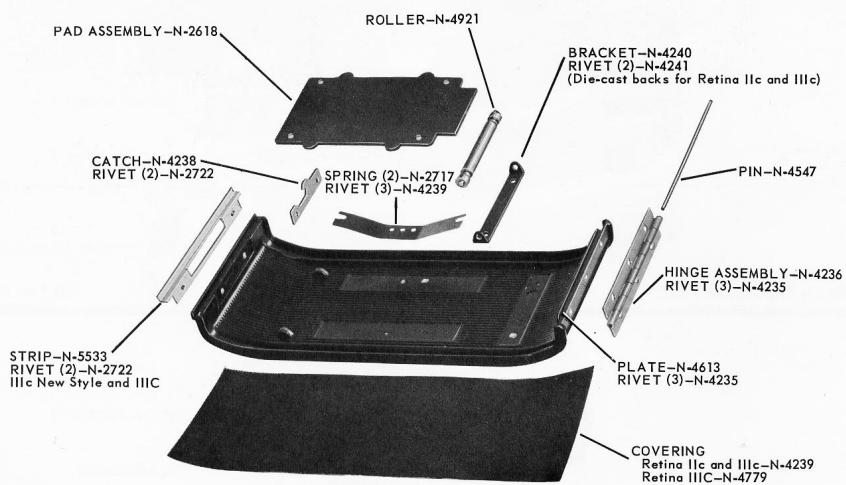


Figure 2

Always give PART NUMBER and NAME when ordering parts


3

KODAK RETINA IIC, IIIC, and IIIC CAMERAS

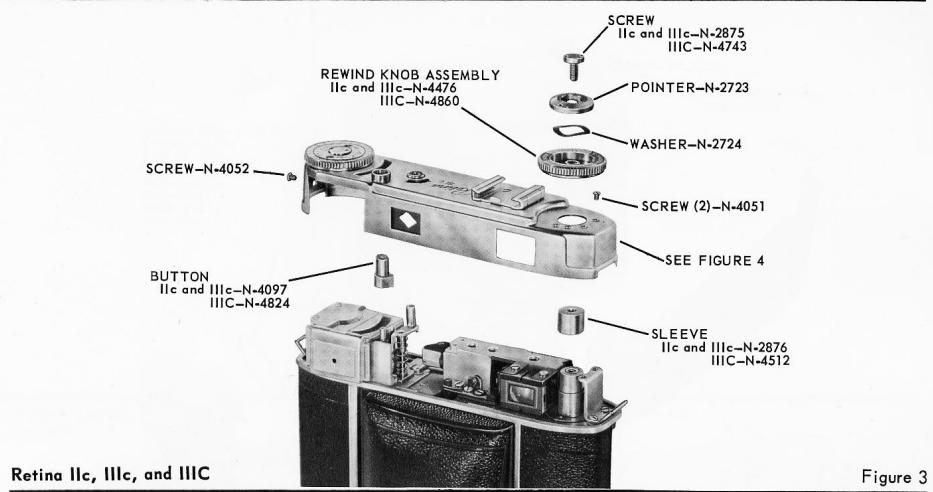

Retina IIC, IIIC, and IIIC

Figure 3

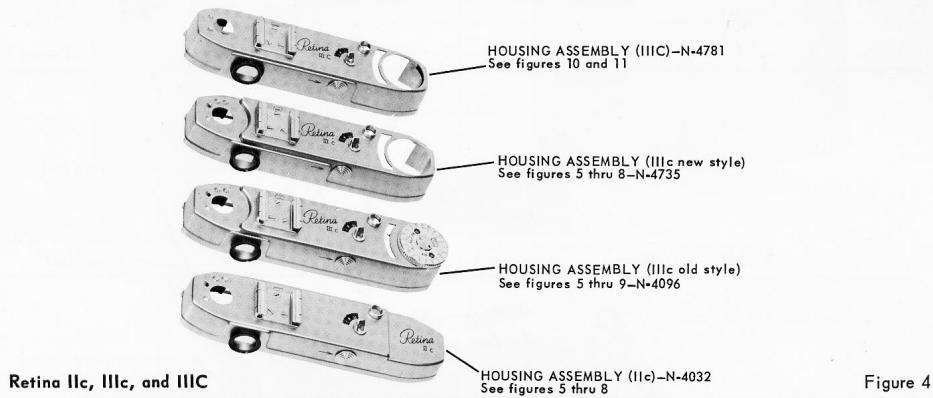

Retina IIC, IIIC, and IIIC


Figure 4




Retina IIC, IIIC, and IIIC

Figure 4A

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

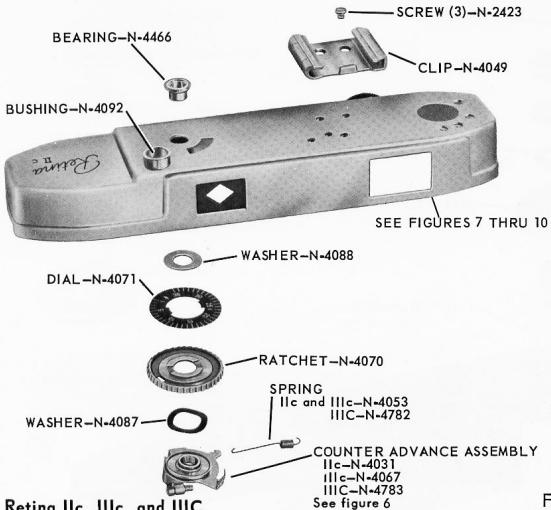


Retina IIc, IIIc, and IIIC

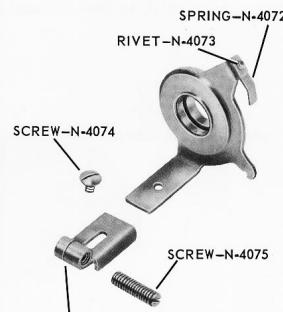

Available only in Counter Advance Assembly. Refer to figure 5.


COUNTER ADVANCE ASSEMBLY
IIc-N-4031
IIc-N-4062
IIIC-N-4283

Retina IIc, IIIc, and IIIC Figure 6

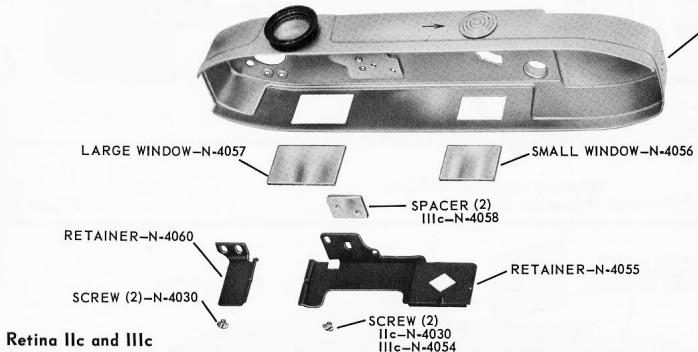

Retina IIc and IIIc

Figure 7

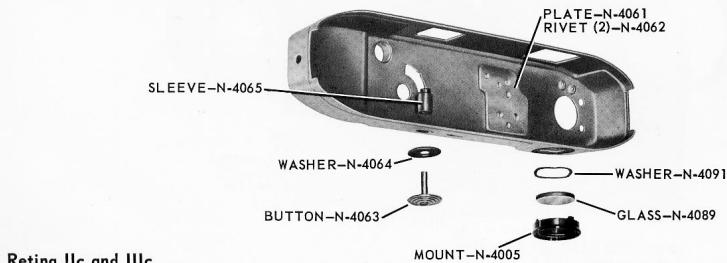


Retina IIc and IIIc

Figure 8


Always give PART NUMBER and NAME when ordering parts

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

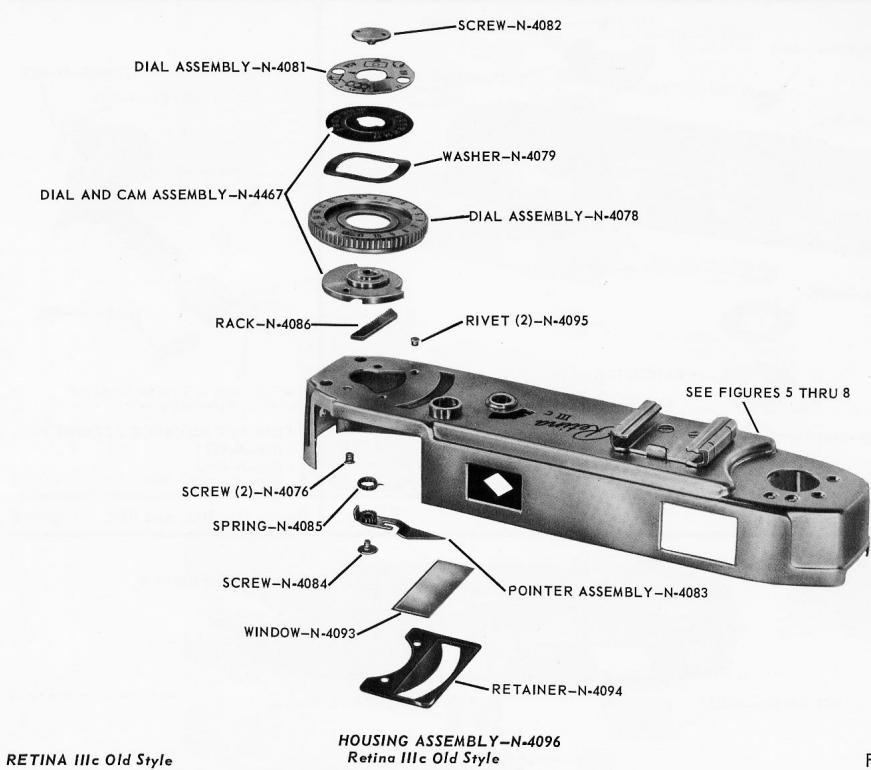

RETINA IIIC Old Style

Figure 9

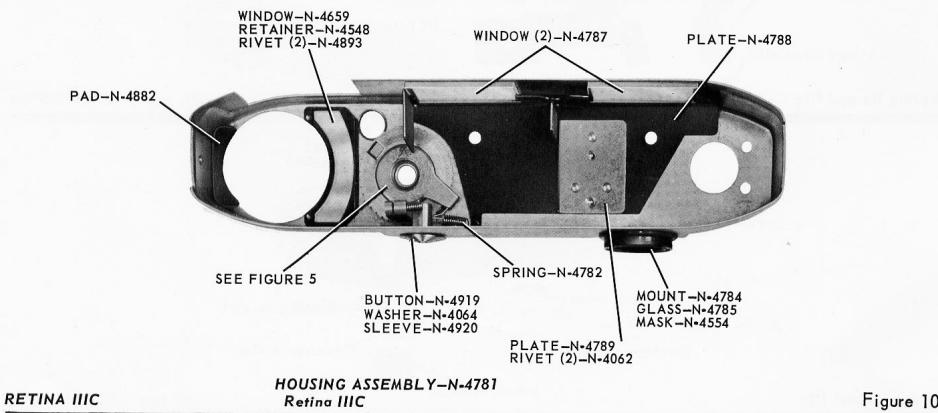


RETINA IIIC

Figure 10


Always give PART NUMBER and NAME when ordering parts

KODAK RETINA IIC, IIIC, and IIIC CAMERAS

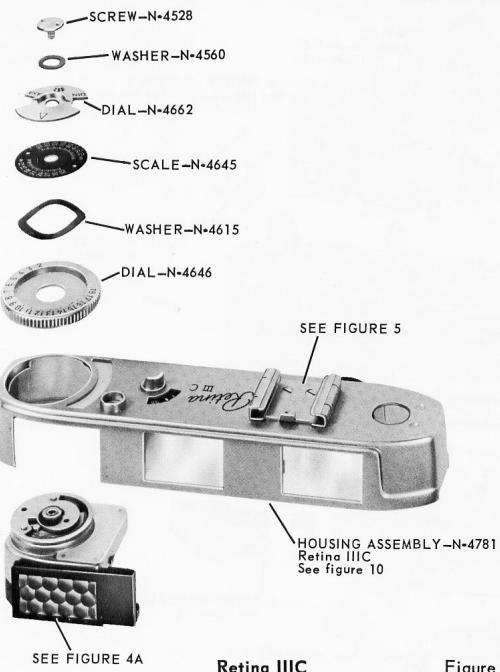



Retina IIIC

Figure 11

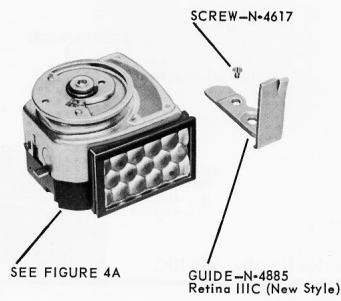

Retina IIIC

Figure 12

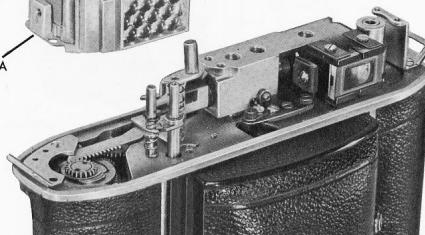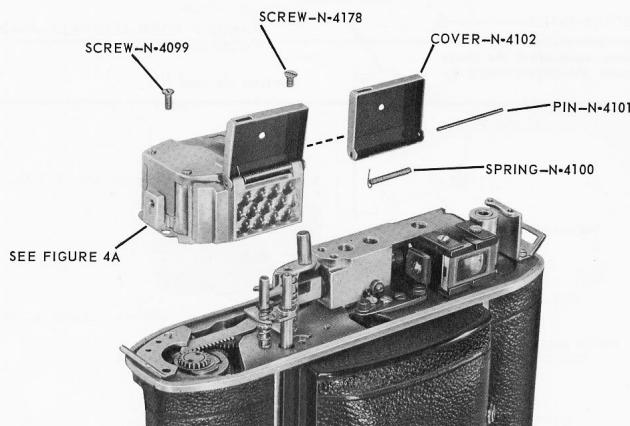


Retina IIIC

Figure 13

Always give PART NUMBER and NAME when ordering parts


7

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

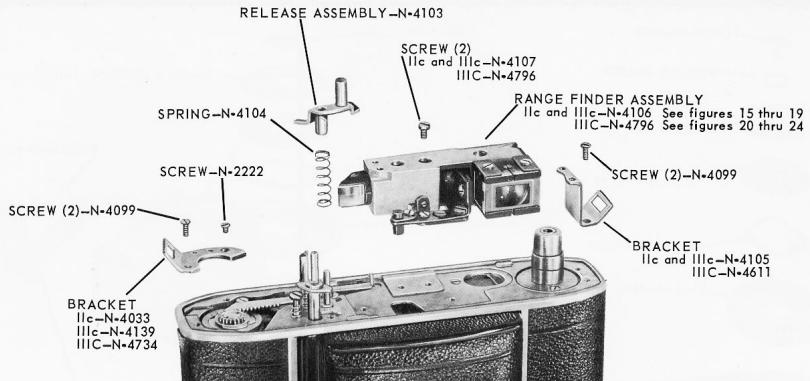


Retina IIc, IIIc, and IIIC

Figure 14

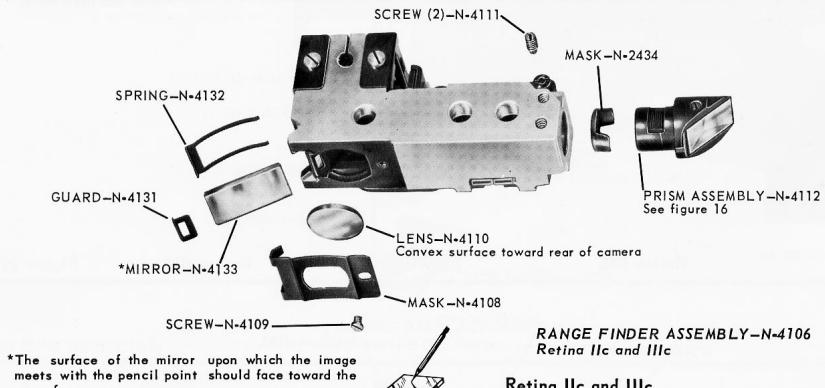

Retina IIc and IIIc




Figure 15

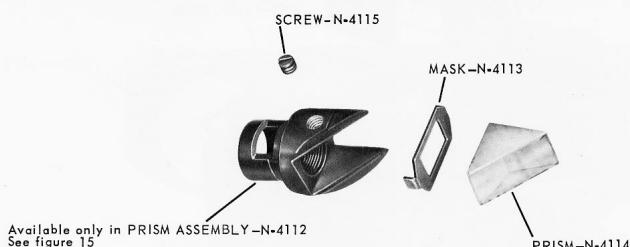

Retina IIc and IIIc


Figure 16

KODAK RETINA IIC, IIIc, and IIIC CAMERAS

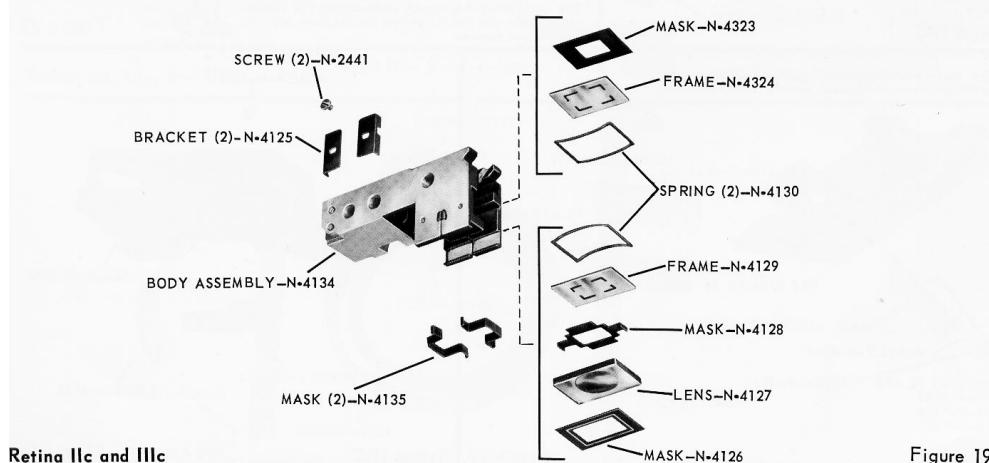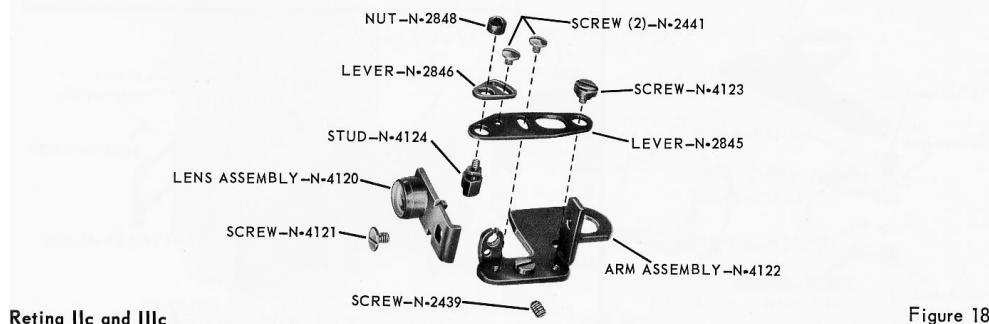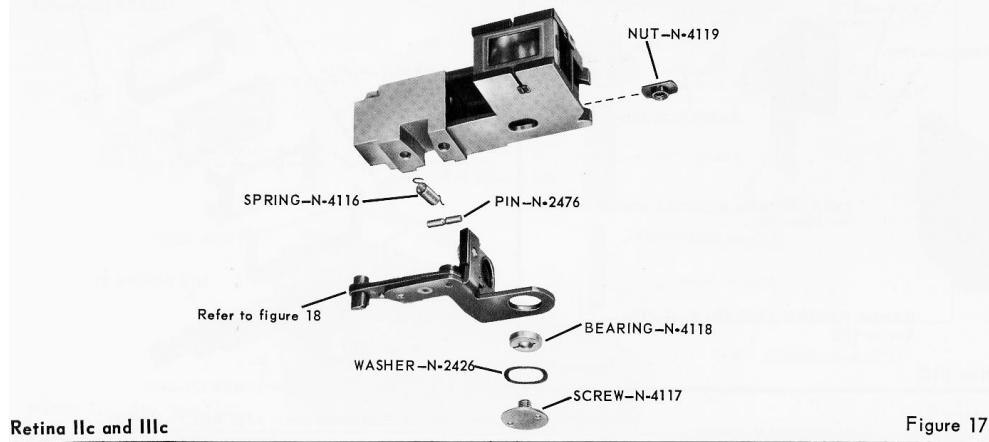

Always give PART NUMBER and NAME when ordering parts


KODAK RETINA IIC, IIIC, and IIIC CAMERAS

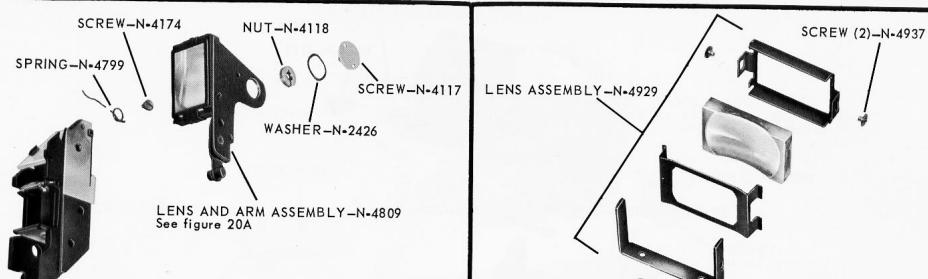

RANGE FINDER ASSEMBLY-N-4796
Retina IIIC

Retina IIIC


Figure 20

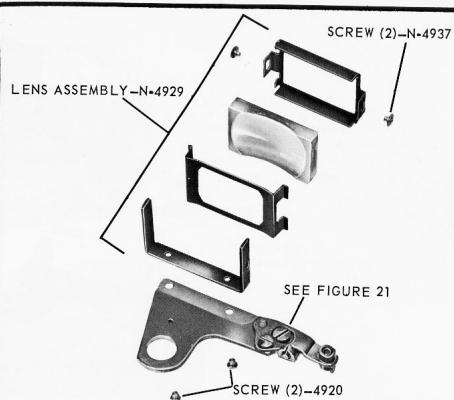

LENS AND ARM ASSEMBLY-N-4809

Figure 20A

Retina IIIC

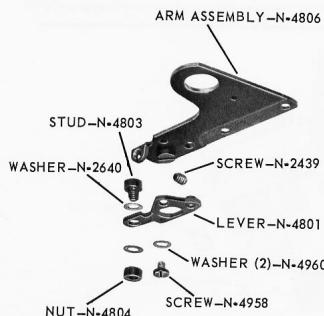


Retina IIIC

Figure 21


Retina IIIC

Figure 20A

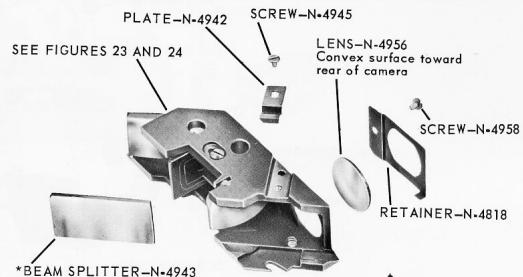

*The surface of the mirror upon which the image meets with the pencil point should face toward the rear of camera.

Figure 22

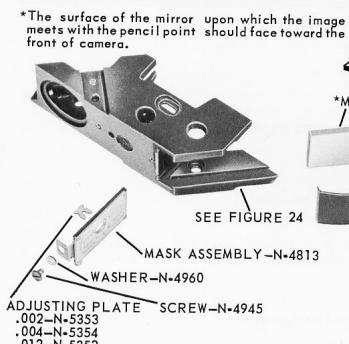

Retina IIIC

Figure 23


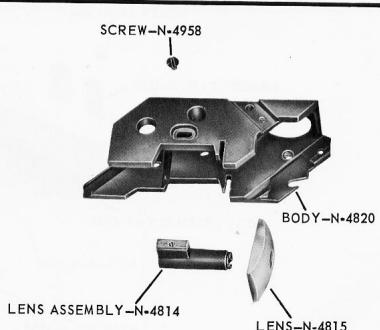



Figure 24

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

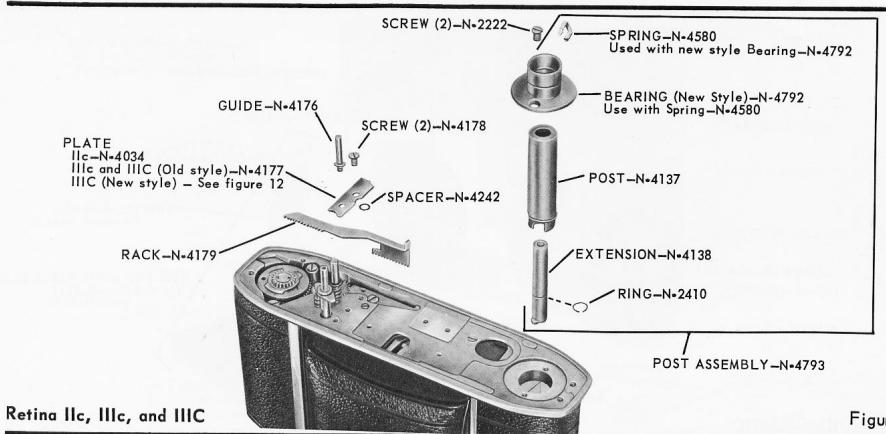


Retina IIc, IIIc, and IIIC

Figure 25

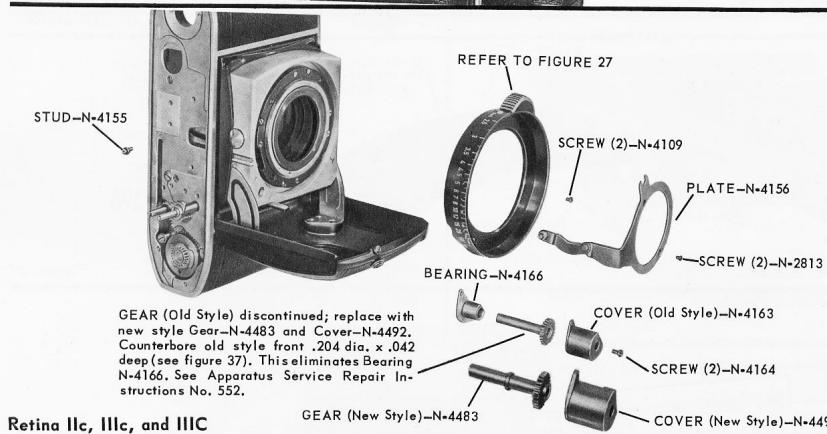

Retina IIc, IIIc, and IIIC

Figure 26

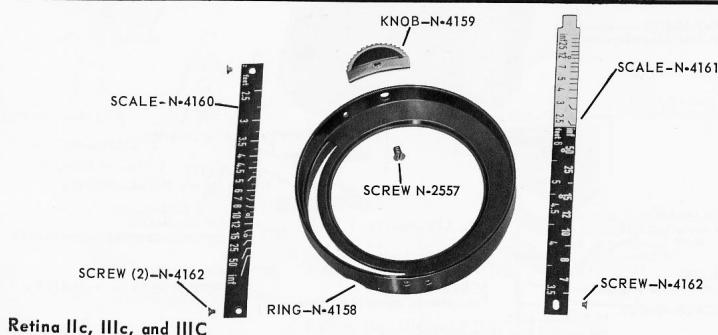


Retina IIc, IIIc, and IIIC

Figure 27

Always give PART NUMBER and NAME when ordering parts

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

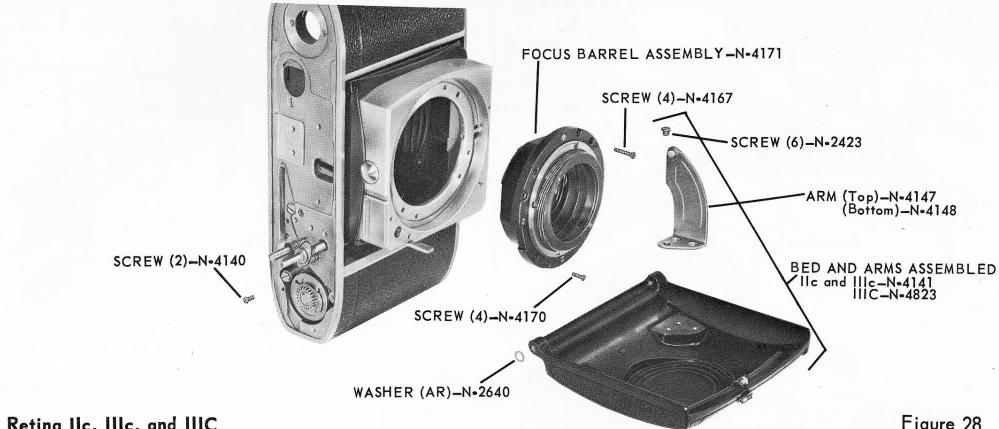


Retina IIc, IIIc, and IIIC

Figure 28



Retina IIc, IIIc, and IIIC

Figure 29

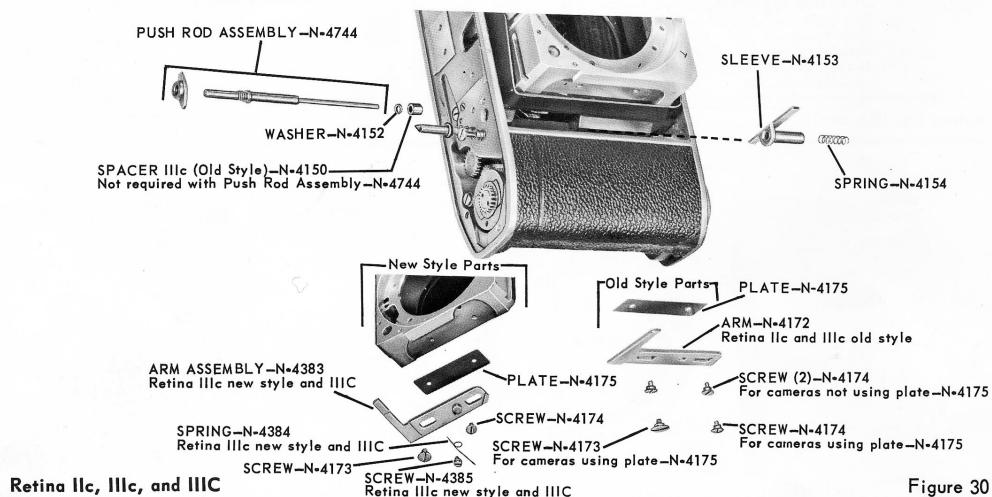

Retina IIc, IIIc, and IIIC

Figure 30

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

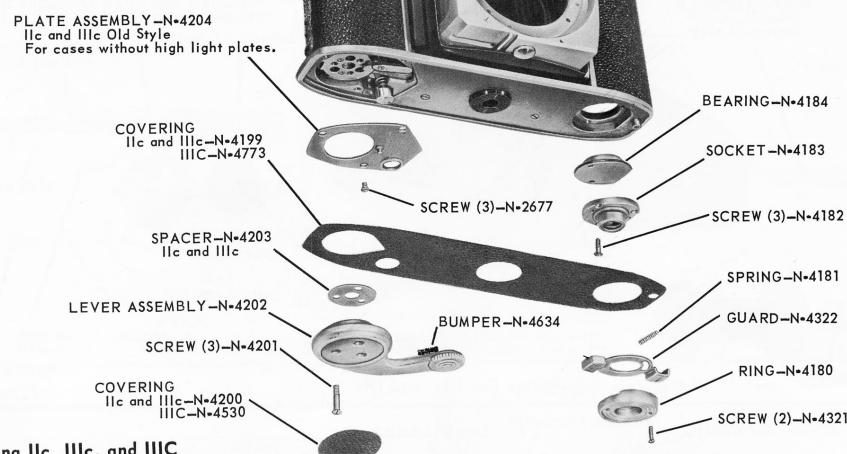


Figure 31

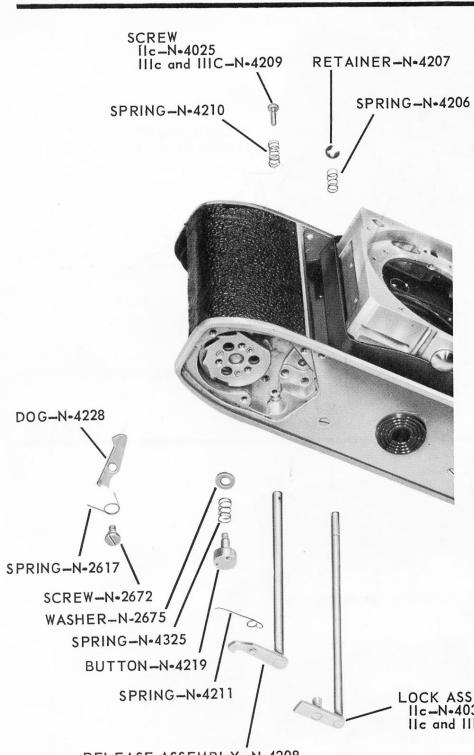


Figure 33

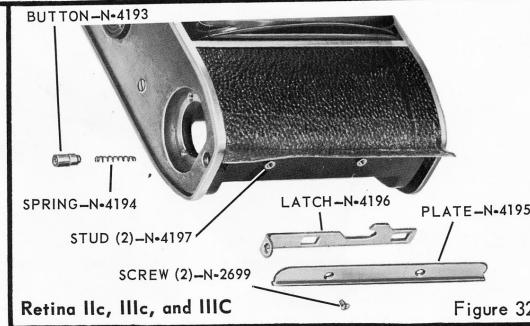


Figure 32

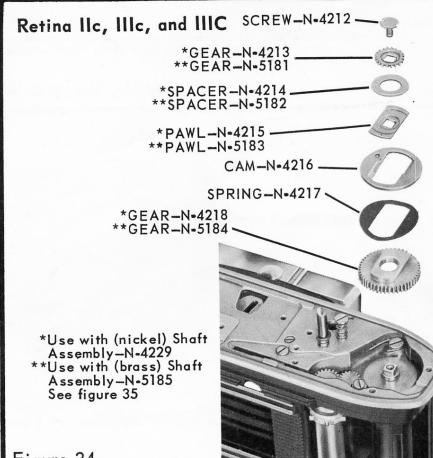


Figure 34

Always give PART NUMBER and NAME when ordering parts

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

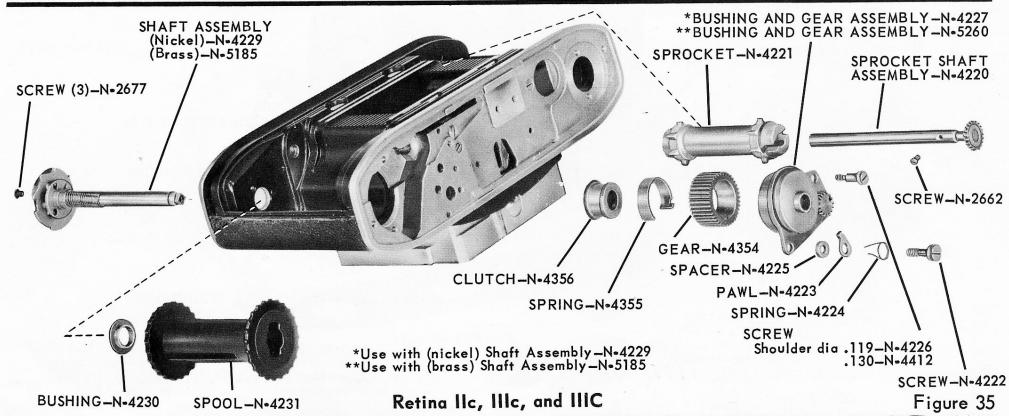


Figure 35

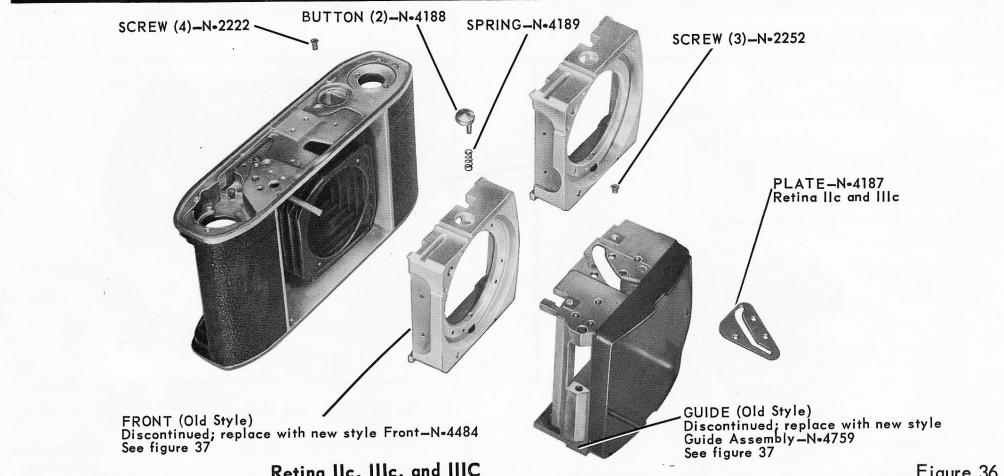


Figure 36

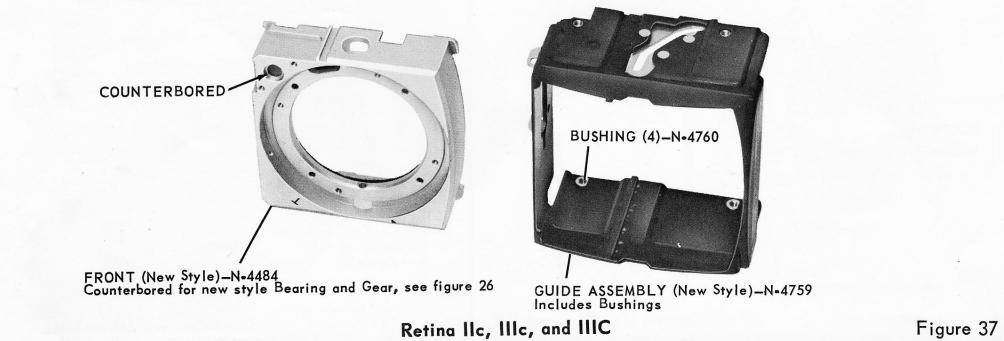


Figure 37

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

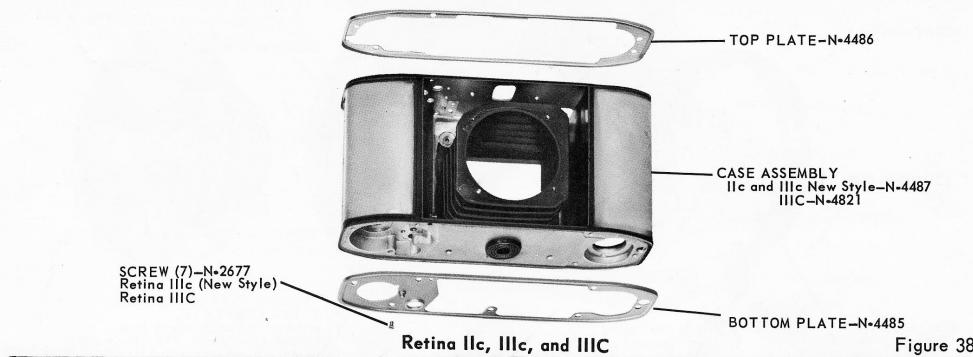


Figure 38

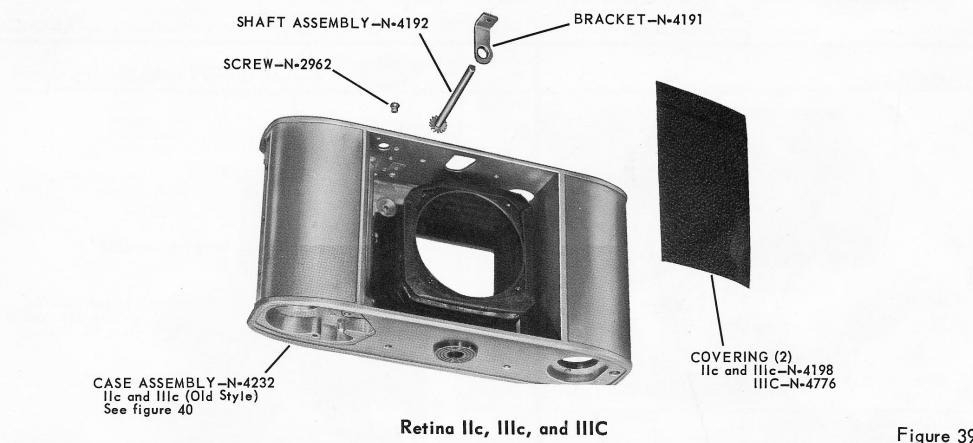


Figure 39

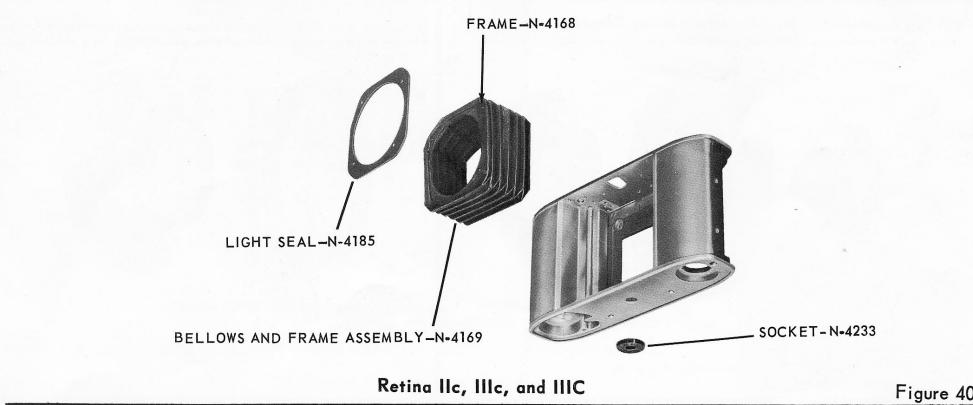


Figure 40

Always give PART NUMBER and NAME when ordering parts

15

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

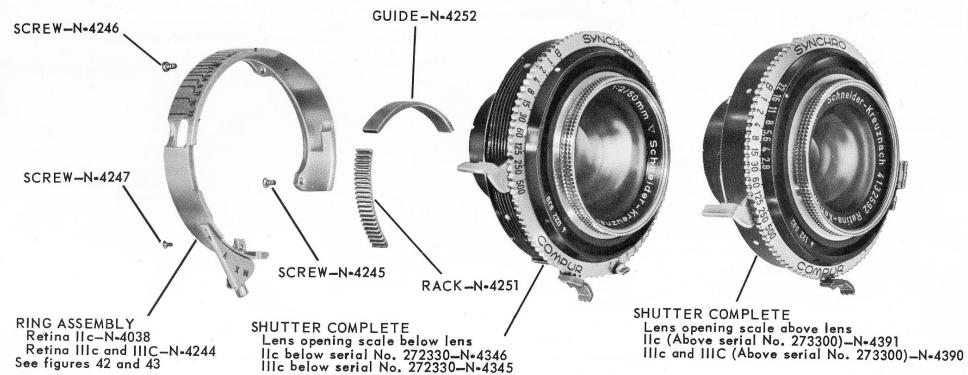


Figure 41

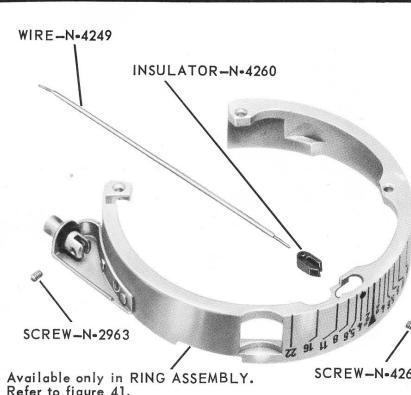


Figure 42



FLASH TERMINAL ASSEMBLY—N-4320

Figure 43

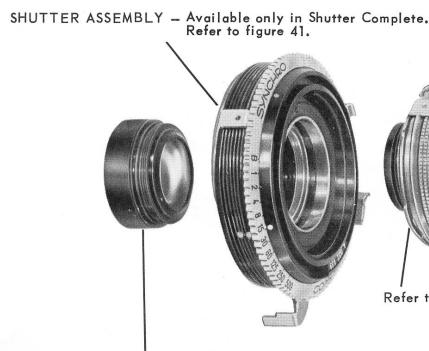


Figure 44



Figure 45

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

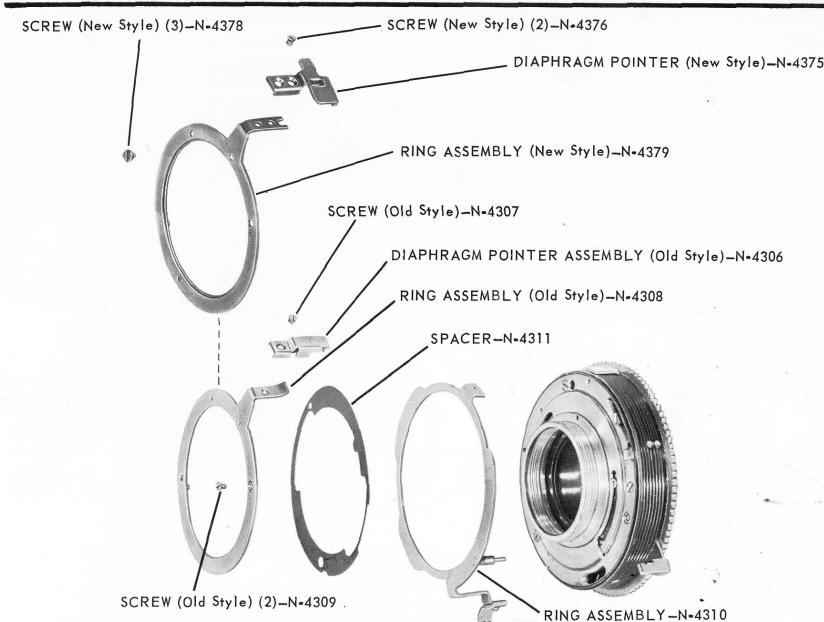


Figure 46

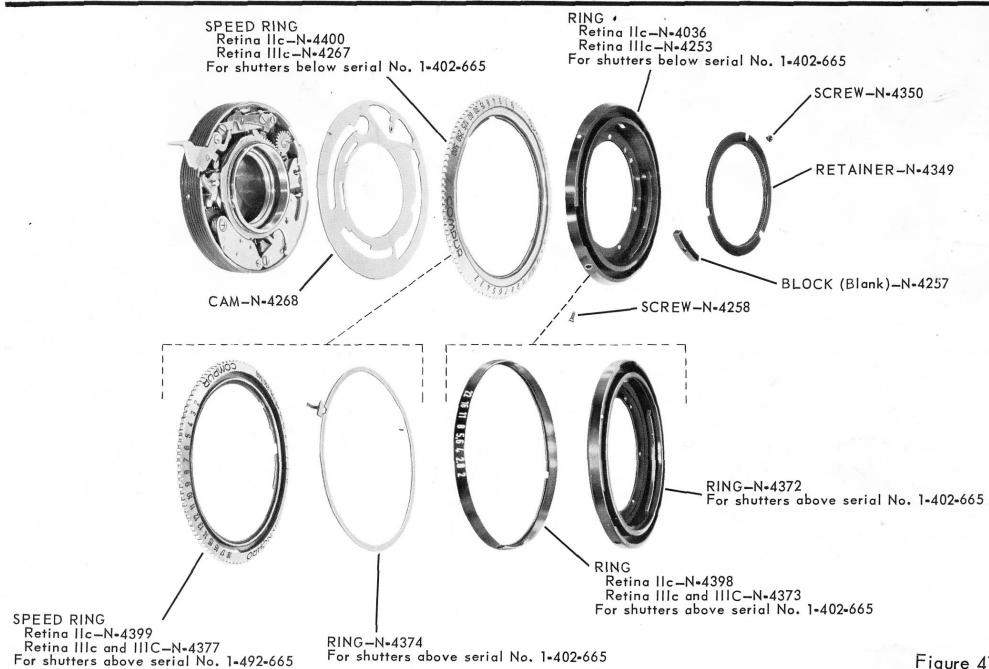


Figure 47

Always give PART NUMBER and NAME when ordering parts

17

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

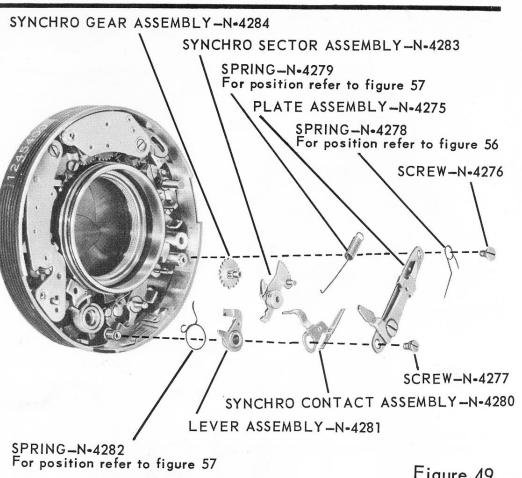
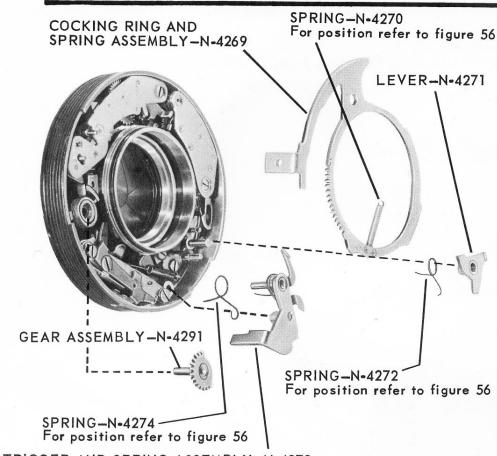


Figure 48

Figure 49

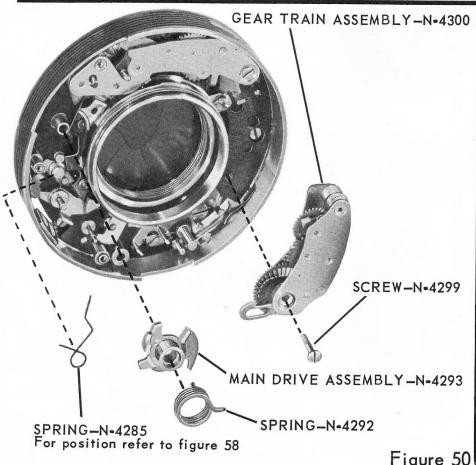


Figure 50

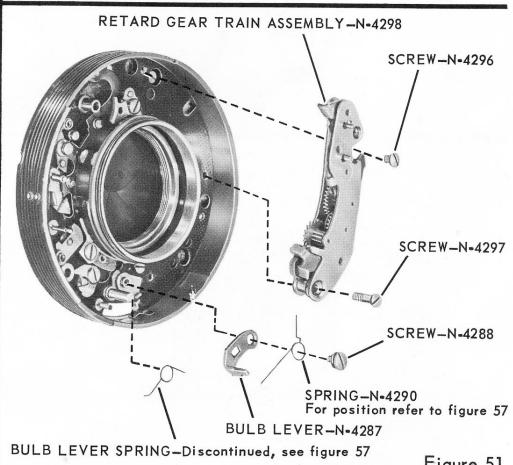


Figure 51

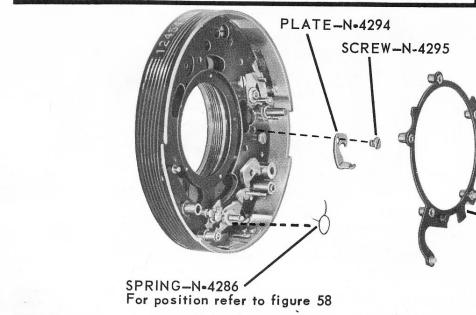


Figure 52

KODAK RETINA IIC, IIIC, and IIIC CAMERAS

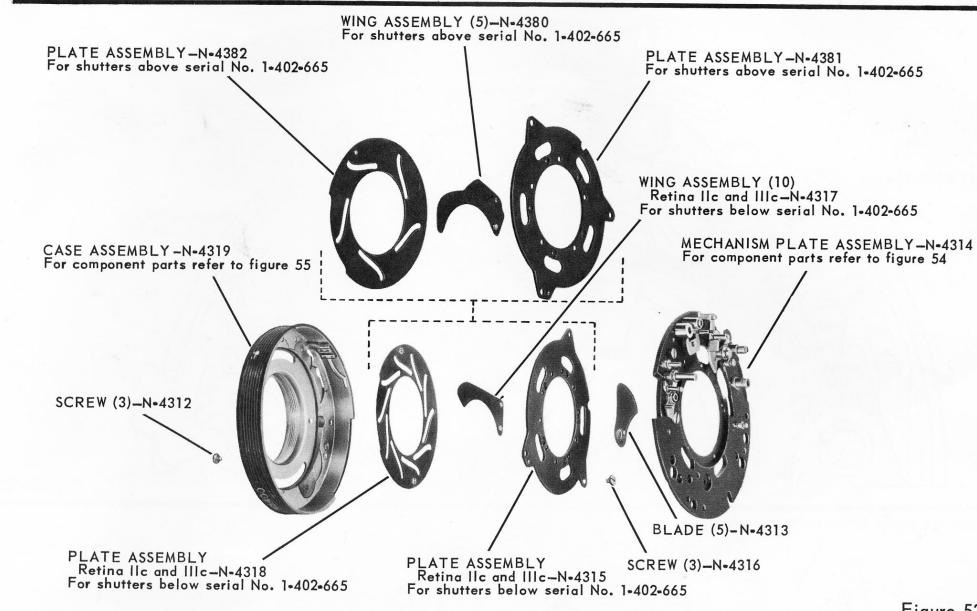


Figure 53

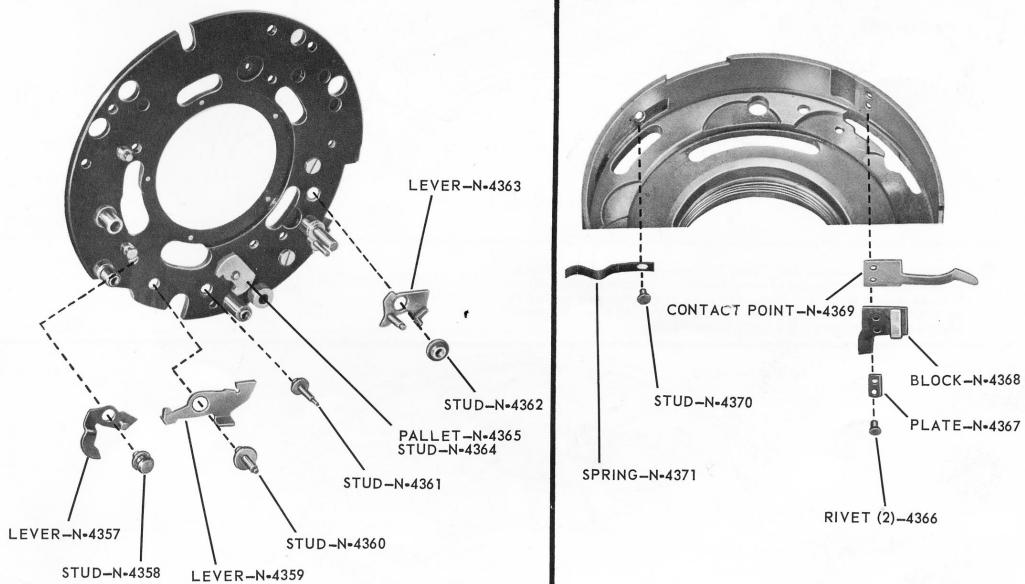


Figure 54

Figure 55

Always give PART NUMBER and NAME when ordering parts

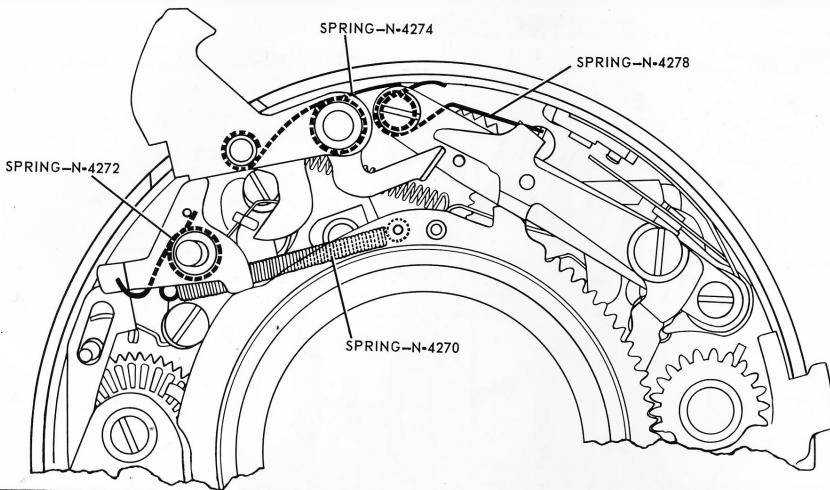


Figure 56

BULB LEVER SPRING—Discontinued, see note.

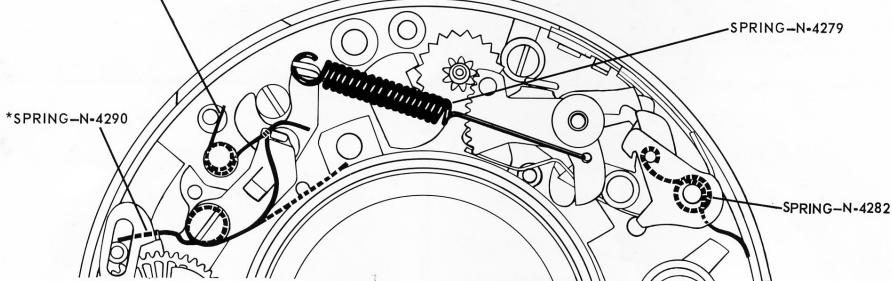


Figure 57

*The old-and new-style Self Timer Springs—N-4290 are positioned as indicated. The long end of the old spring rests against the shutter hub, as shown by broken line. The long end of the new spring is formed to the Control Bulb Lever, as shown by solid line. The new-style spring eliminates the Bulb Lever Spring.

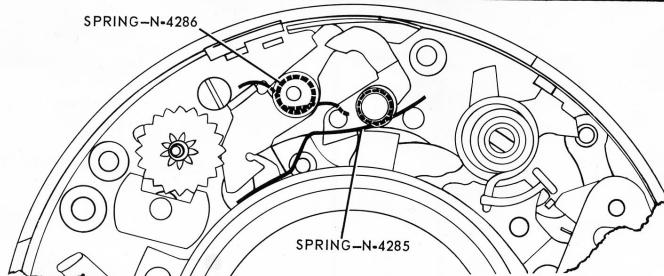


Figure 58

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

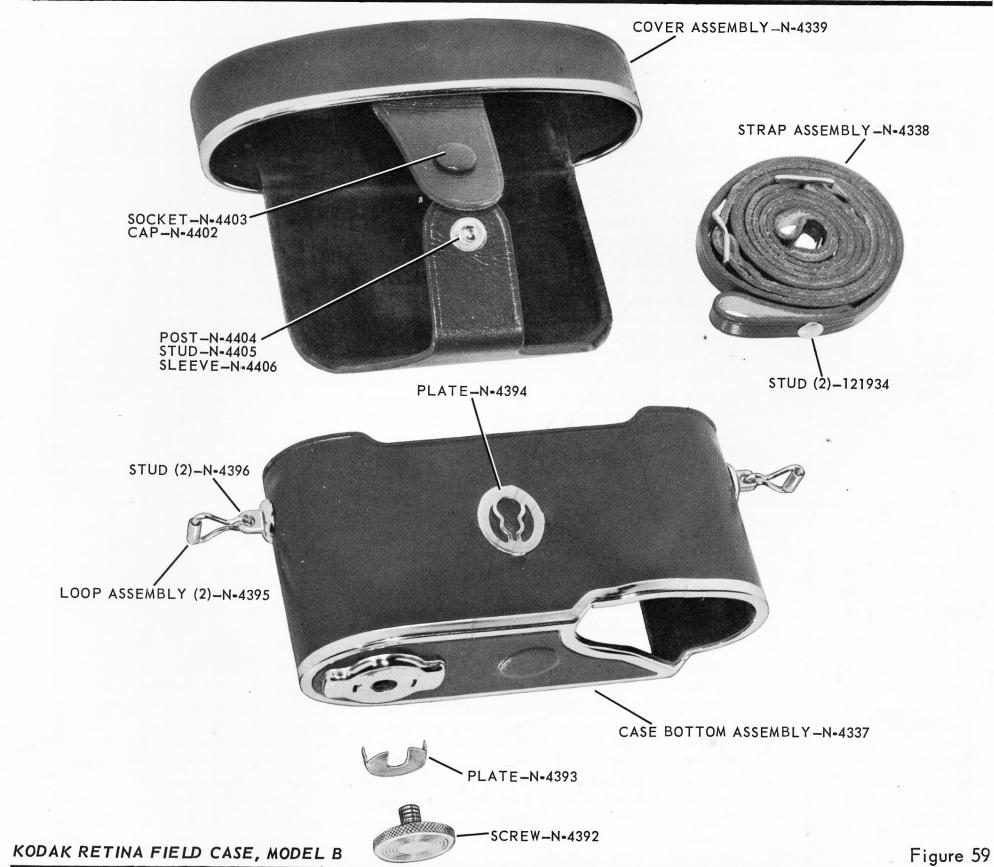


Figure 59

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

Part No.	IIc	IIIc	IIIC	O.S. N.S.	Part Name	Fig.
N-2222	x	x	x	x	Screw.....	14,25,36
N-2252	x	x	x	x	Screw - Actuating arm guide plate.....	36
N-2410	x	x	x	x	Ring - Rewind post extension retaining.....	25
N-2423	x	x	x	x	Screw.....	5,28
N-2426	x	x	x	x	Washer - Range finder movable arm, tension.....	17,20
N-2434	x	x	x		Mask - Prism	15
N-2439	x	x	x	x	Screw - Range finder movable arm, adjusting	18,21
N-2441	x	x	x		Screw.....	18,19
N-2476	x	x	x		Pin - Range finder movable arm	17
N-2557	x	x	x	x	Screw - Focus ring knob	27
N-2617	x	x	x	x	Spring - Rewind release dog	33
N-2618	x	x	x	x	Film Tension Pad Assembly	2
N-2640	x	x	x	x	Washer.....	21,28

Always give PART NUMBER and NAME when ordering parts

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

Part No.	IIC	IIIc	IIIC	O.S. N.S.	Part Name	Fig.
N-2662	x	x	x	x	Screw - Sprocket shaft.	35
N-2672	x	x	x	x	Screw - Rewind release dog.	33
N-2675	x	x	x	x	Washer - Rewind release, bottom.	33
N-2677	x	x	x	x	Screw.	1,31,35,38
N-2699	x	x	x	x	Screw - Back latch plate.	32
N-2717	x	x	x	x	Spring - Tension pad.	2
N-2722	x	x	x	x	Rivet - Back catch.	2
N-2723	x	x	x	x	Pointer - Film indicator.	3
N-2724	x	x	x	x	Washer - Film indicator pointer, tension.	3
N-2813	x	x	x	x	Screw - Range finder actuating plate.	26
N-2845	x	x	x	x	Lever - Range finder adjusting, large.	18
N-2846	x	x	x	x	Lever - Range finder adjusting, small.	18
N-2848	x	x	x	x	Nut - Range finder to actuating arm stud.	18
N-2875	x	x	x	x	Screw - Rewind knob.	3
N-2876	x	x	x	x	Sleeve - Rewind post.	3
N-2962	x	x	x	x	Screw - Shutter shaft bracket.	39
N-4005	x	x	x	x	Mount - Eyelet glass.	8
N-4025	x				Screw - Wind release adjusting.	33
N-4030	x	x	x	x	Screw - Finder window retainer.	7
N-4031	x				Counter Advance Assembly.	5
N-4032	x				Range Finder Housing Assembly.	4
N-4033	x				Bracket - Carrying strap, right.	14
N-4034	x				Plate - Setting rack retaining.	25
N-4035	x				Film Advance Lock Assembly.	33
N-4039	x				Mask - Incident light.	1
N-4040	x	x	x	x	Collar - Shutter retaining.	1
N-4041	x	x	x	x	Washer - Lens compensating (.002).	1
N-4042	x	x	x	x	Washer - Lens compensating (.0025).	1
N-4043	x	x	x	x	Washer - Lens compensating (.008).	1
N-4044	x	x	x	x	Washer - Lens compensating (.013).	1
N-4045	x	x	x	x	Washer - Lens compensating (.009).	1
N-4046	x	x	x	x	Washer - Lens compensating (.021).	1
N-4047	x	x	x	x	Washer - Lens compensating (.032).	1
N-4048	x	x	x	x	Washer - Lens compensating (.0315).	1
N-4049	x	x	x	x	Clip.	5
N-4051	x	x	x	x	Screw - Range finder housing, top.	3
N-4052	x	x	x	x	Screw - Range finder housing, side.	3
N-4053	x	x	x	x	Spring - Exposure.	5
N-4054	x	x	x	x	Screw - Finder window retainer.	7
N-4055	x	x	x	x	Retainer - Finder window.	7
N-4056	x	x	x	x	Window - Finder, small.	7
N-4057	x	x	x	x	Window - Finder, large.	7
N-4058	x				Spacer - Finder window retainer.	7
N-4060	x	x	x	x	Retainer - Finder window.	7
N-4061	x	x	x	x	Plate - Clip reinforcing.	8
N-4062	x	x	x	x	Rivet - Clip reinforcing plate.	8,10
N-4063	x	x	x	x	Button - Counter setting.	8
N-4064	x	x	x	x	Washer - Counter setting button.	8,10
N-4065	x	x	x	x	Sleeve - Counter setting button.	8
N-4067	x	x	x	x	Counter Advance Assembly.	5
N-4070	x	x	x	x	Ratchet - Counter.	5
N-4071	x	x	x	x	Dial - Counter.	5
N-4072	x	x	x	x	Spring - Counter actuating.	6
N-4073	x	x	x	x	Rivet - Counter actuating spring.	6
N-4074	x	x	x	x	Screw - Counter advance adjusting bracket.	6
N-4075	x	x	x	x	Screw - Exposure counter, adjusting.	6
N-4076	x				Screw - Meter scale cam.	9
N-4078	x				Meter Dial Assembly.	9
N-4079	x				Washer - Meter dial, tension.	9
N-4081	x				Film Speed Indicating Dial Assembly.	9
N-4082	x				Screw - Film speed indicating, dial.	9
N-4083	x				Meter Dial Pointer Assembly.	9
N-4084	x				Screw - Meter dial pointer assembly.	9
N-4085	x				Spring - Meter dial pointer.	9
N-4086	x				Rack - Meter pointer.	9

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

Part No.	IIc	IIIc	IIIC	Part Name	Fig.
O.S. N.S.					
N-4087	x	x	x	Washer - Counter ratchet, tension	5
N-4088	x	x	x	Washer - Counter ratchet, spacing	5
N-4089	x	x	x	Glass - Eyelet	8
N-4091	x	x	x	Washer - Eyelet glass	8
N-4092	x	x	x	Bushing - Body release	5
N-4093	x			Window - Meter dial	9
N-4094	x			Retainer - Meter dial cover	9
N-4095	x			Rivet - Meter dial cover retainer	9
N-4096	x			Range Finder Housing Assembly	4,9
N-4097	x	x	x	Button - Body release	3
N-4099	x	x	x	Screw	13,14
N-4100	x	x		Spring - Exposure meter cover hinge	13
N-4101	x	x		Pin - Exposure meter cover hinge	13
N-4102	x	x		Cover - Exposure meter	13
N-4103	x	x	x	Wind and Counter Release Assembly	14
N-4104	x	x	x	Spring - Wind and counter release	14
N-4105	x	x		Bracket - Carrying strap, left	14
N-4106	x	x		Range Finder Assembly	14,15
N-4107	x	x		Screw - Range finder to case	14
N-4108	x	x		Mask - Range finder eyelet	15
N-4109	x	x	x	Screw	15,26
N-4110	x	x	x	Lens - Range finder eyelet	15
N-4111	x	x	x	Screw - Range finder, halving adjusting	15
N-4112	x	x	x	Range Finder Prism Assembly	15,16
N-4113	x	x	x	Mask - Prism	16
N-4114	x	x	x	Prism - Range finder	16
N-4115	x	x	x	Screw - Range finder prism	16
N-4116	x	x	x	Spring - Range finder movable arm	17
N-4117	x	x	x	Screw - Range finder movable arm	17,20
N-4118	x	x	x	Bearing - Range finder movable arm	17,20
N-4119	x	x	x	Nut - Range finder movable arm screw	17
N-4120	x	x	x	Range Finder Lens Assembly	18
N-4121	x	x	x	Screw - Objective lens bracket	18
N-4122	x	x	x	Range Finder Movable Arm Assembly	18
N-4123	x	x	x	Screw - Range finder adjustable lever pivot	18
N-4124	x	x	x	Stud - Range finder to actuating arm	18
N-4125	x	x	x	Bracket - Finder lens retaining bracket	19
N-4126	x	x	x	Mask - Range finder, parallax	19
N-4127	x	x	x	Lens - Finder, front	19
N-4128	x	x	x	Mask - Range finder front lens	19
N-4129	x	x	x	Frame - Front finder mirror	19
N-4130	x	x	x	Spring - Range finder lens, tension	19
N-4131	x	x	x	Guard - Transparent mirror	15
N-4132	x	x	x	Spring - Transparent mirror, retaining	15
N-4133	x	x	x	Mirror - Transparent	15
N-4134	x	x	x	Range Finder Body Assembly	19
N-4135	x	x	x	Mask - Finder dividing	19
N-4137	x	x	x	Post - Rewind	25
N-4138	x	x	x	Extension - Rewind post	25
N-4139	x	x	x	Bracket - Carrying strap, right	14
N-4140	x	x	x	Screw - Bed hinge	28
N-4141	x	x	x	Bed and Arms Assembled	28
N-4142	x	x	x	Button - Bed latch	29
N-4143	x	x	x	Pin - Bed latch	29
N-4144	x	x	x	Spring - Bed latch	29
N-4145	x	x	x	Covering - Bed, front	29
N-4146	x	x	x	Covering - Bed, side	29
N-4147	x	x	x	Arm - Bed, top	28
N-4148	x	x	x	Arm - Bed, bottom	28
N-4150	x			Spacer - Body release push rod	30
N-4152	x	x	x	Washer - Body release push rod, spacing	30
N-4153	x	x	x	Sleeve - Body release trip	30
N-4154	x	x	x	Spring - Body release trip sleeve	30
N-4155	x	x	x	Stud - Range finder actuating arm	26
N-4156	x	x	x	Range Finder Actuating Plate Assembly	26

Always give PART NUMBER and NAME when ordering parts

23

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

Part No.	IIC	IIIc	IIIC	O.S. N.S.	Part Name	Fig.
N-4158	x	x	x	x	Ring - Focus	27
N-4159	x	x	x	x	Knob - Focus ring.	27
N-4160	x	x	x	x	Scale - Focus,	27
N-4161	x	x	x	x	Scale - Focus, (For Longar and Curtar Lens Components).	27
N-4162	x	x	x	x	Screw - Focus scale retaining.	27
N-4163	x	x	x	x	Cover - Shutter setting gear (Old style)	26
N-4164	x	x	x	x	Screw - Shutter setting gear.	26
N-4166	x	x	x	x	Bearing - Shutter setting gear.	26
N-4167	x	x	x	x	Screw - Front bellows frame	28
N-4168	x	x	x	x	Frame - Front bellows	40
N-4169	x	x	x	x	Bellows and Frame Assembly	40
N-4170	x	x	x	x	Screw - Focus barrel to front	28
N-4171	x	x	x	x	Focus Barrel Assembly	28
N-4172	x	x			Arm - Shutter trip	30
N-4173	x	x	x	x	Screw - Shutter trip arm, large.	30
N-4174	x	x	x	x	Screw	20,30
N-4175	x	x	x	x	Plate - Shutter trip arm.	30
N-4176	x	x	x	x	Guide - Wind and counter release	25
N-4177	x	x	x	x	Plate - Setting rack, retaining.	25
N-4178	x	x	x	x	Screw	13,25
N-4179	x	x	x	x	Rack - Setting	25
N-4180	x	x	x	x	Ring - Tripod socket, outer	31
N-4181	x	x	x	x	Spring - Back latch button guard	31
N-4182	x	x	x	x	Screw - Tripod socket	31
N-4183	x	x	x	x	Socket - Tripod	31
N-4184	x	x	x	x	Bearing - Casette	31
N-4185	x	x	x	x	Seal - Light	40
N-4187	x	x	x	x	Plate - Actuating arm guide	36
N-4188	x	x	x	x	Button - Front release.	36
N-4189	x	x	x	x	Spring - Front release button	36
N-4191	x	x	x	x	Bracket - Shutter setting gear and shaft assembly	39
N-4192	x	x	x	x	Shutter Setting Gear and Shaft Assembly	39
N-4193	x	x	x	x	Button - Back latch	32
N-4194	x	x	x	x	Spring - Back latch button	32
N-4195	x	x	x	x	Plate - Back latch.	32
N-4196	x	x	x	x	Latch - Back	32
N-4197	x	x	x	x	Stud - Back latch guide	32
N-4198	x	x	x	x	Covering - Case, end.	39
N-4199	x	x	x	x	Covering - Case, bottom	31
N-4200	x	x	x	x	Covering - Winding lever	31
N-4201	x	x	x	x	Screw - Winding lever	31
N-4202	x	x	x	x	Winding Lever Assembly	31
N-4203	x	x	x	x	Spacer - Winding lever	31
N-4204	x	x			Bottom Mechanism Cover Plate Assembly	31
N-4205	x	x	x	x	Film Advance Lock Assembly	33
N-4206	x	x	x	x	Spring - Film advance lock assembly	33
N-4207	x	x	x	x	Retainer - Film advance lock spring	33
N-4208	x	x	x	x	Wind Release Assembly	33
N-4209	x	x	x	x	Screw - Wind release adjusting	33
N-4210	x	x	x	x	Spring - Wind release	33
N-4211	x	x	x	x	Spring - Wind release throw-out	33
N-4212	x	x	x	x	Screw - Drive mechanism to wind shaft	34
N-4213	x	x	x	x	Gear - Winding shaft.	34
N-4214	x	x	x	x	Spacer - Winding shaft pinion	34
N-4215	x	x	x	x	Pawl - Winding shaft	34
N-4216	x	x	x	x	Cam - Winding shaft	34
N-4217	x	x	x	x	Spring - Wind shaft cam, tension.	34
N-4218	x	x	x	x	Gear - Film advance drive	34
N-4219	x	x	x	x	Button - Rewind release.	33
N-4220	x	x	x	x	Sprocket Shaft Assembly	35
N-4221	x	x	x	x	Sprocket	35
N-4222	x	x	x	x	Screw - Drive gear pawl	35
N-4223	x	x	x	x	Pawl - Drive gear.	35
N-4224	x	x	x	x	Spring - Drive gear pawl	35
N-4225	x	x	x	x	Spacer - Drive gear pawl.	35

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

Part No.	IIc	IIIc	IIIC	O.S. N.S.	Part Name	Fig.
N-4226	x	x	x	x	Screw - Setting rack guide (Shoulder dia. 119)	35
N-4227	x	x	x	x	Bushing and Gear Assembly	35
N-4228	x	x	x	x	Dog - Rewind release	33
N-4229	x	x	x	x	Winding Shaft Assembly (Nickcl)	35
N-4230	x	x	x	x	Bushing - Take-up spool	35
N-4231	x	x	x	x	Spool - Take-up	35
N-4232	x	x	x	x	Case Assembly	39
N-4233	x	x	x	x	Socket - Flashholder positioning	40
N-4234	x	x	x	x	Back Assembly	1,2
N-4235	x	x	x	x	Rivet - Hinge to back	2
N-4236	x	x	x	x	Back Hinge Assembly	2
N-4237	x	x	x	x	Covering - Back	2
N-4238	x	x	x	x	Catch - Back	2
N-4239	x	x	x	x	Rivet - Film tension pad spring	2
N-4240	x	x	x	x	Bracket - Film roller	2
N-4241	x	x	x	x	Rivet - Film roller bracket	2
N-4242	x	x	x	x	Spacer - Back retaining plate	25
N-4243	x				Exposure Meter Assembly	4A
N-4321	x	x	x	x	Screw - Tripod socket outer ring	31
N-4322	x	x	x	x	Guard - Back latch button	31
N-4323	x	x	x	x	Mask - Finder, rear	19
N-4324	x	x	x	x	Frame - Rear finder mirror	19
N-4325	x	x	x	x	Spring - Rewind release button	33
N-4353	x				Glass - Meter	4A
N-4354	x	x	x	x	Gear - Clutch	35
N-4355	x	x	x	x	Spring - Clutch, pressure	35
N-4356	x	x	x	x	Clutch	35
N-4383	x	x	x	x	Shutter Trip Arm Assembly	30
N-4384	x				Spring - Shutter trip arm	30
N-4385	x	x	x	x	Screw - Shutter trip arm spring	30
N-4412	x	x	x	x	Screw - Setting rack guide (Shoulder dia. 130)	35
N-4466	x	x	x	x	Bearing - Counter	5
N-4467	x				Counter Dial and Cam Assembly	9
N-4476	x	x	x	x	Rewind Knob Assembly	3
N-4483	x	x	x	x	Gear - Shutter setting, new style	26
N-4484	x	x	x	x	Front - New style	36,37
N-4485	x	x	x	x	Plate - Bottom	38
N-4486	x	x	x	x	Plate - Top	38
N-4487	x	x	x	x	Case Assembly	38
N-4492	x	x	x	x	Cover - Shutter setting gear, new style	26
N-4503	x	x	x	x	O.S. Meter Assembly	4A
N-4512	x				Sleeve - Rewind post	3
N-4528	x				Screw - Film dial	11
N-4530	x				Covering - Winding lever	31
N-4547	x	x	x	x	Pin - Back hinge	2
N-4548	x				Retainer - Range finder housing window	10
N-4554	x				Mask - Eyelet glass	10
N-4560	x				Washer - Film dial screw	11
N-4580	x	x	x	x	Spring - New style bearing	25
N-4611	x				Bracket - Carrying strap, left	14
N-4613	x	x	x	x	Plate - Back	2
N-4615	x				Washer - Film scale, tension	11
N-4617	x				Screw - Meter guide	12
N-4634	x	x	x	x	Bumper - Winding lever	31
N-4645	x				Scale - Film	11
N-4646	x				Dial - Film	11
N-4656		x	x	x	Mask - Incident light	1
N-4659	x				Window - Range finder housing	10
N-4662	x				Dial - Film	11
N-4734	x				Bracket - Carrying strap, right	14
N-4735		x			Range Finder Housing Assembly	4
N-4743	x				Screw - Rewind knob	3
N-4744	x	x	x	x	Push Rod Assembly	30
N-4759	x	x	x	x	Front Guide Assembly (New style)	36,37
N-4760	x	x	x	x	Bushing - Front guide	37

Always give PART NUMBER and NAME when ordering parts

KODAK RETINA IIc, IIIc, and IIIC CAMERAS

Part No.	IIc	IIIc	IIIC	O.S. N.S.	Part Name	Fig.
N-4773	x				Covering - Case, bottom	31
N-4776	x				Covering - Case, end.	39
N-4777	x				Covering - Bed, front	29
N-4778	x				Covering - Bed, end	29
N-4779	x				Covering - Back.	2
N-4781	x				Range Finder Housing Assembly	4,10,11
N-4782	x				Spring - Film counter advance	5,10
N-4783	x				Film Counter Advance Assembly	5
N-4784	x				Mount - Eyelet lens.	10
N-4785	x				Glass - Eyelet	10
N-4787	x				Window - Range finder housing	10
N-4788	x				Plate - Range finder window, retaining	10
N-4789	x				Plate - Clip reinforcing	10
N-4792	x	x	x	x	Bearing - Rewind post, new style.	25
N-4793	x	x	x	x	Rewind Post Assembly.	25
N-4796	x				Range Finder Assembly	14,20
N-4797	x				Mirror - Range finder	23
N-4798	x				Plate - Range finder mirror.	23
N-4799	x				Spring - Range finder	20
N-4801	x				Lever - Range finder.	21
N-4803	x				Stud - Range finder.	21
N-4804	x				Nut - Range finder	21
N-4806	x				Range Finder Arm Assembly	21
N-4809	x				Range Finder Lens and Arm Assembly	20,20A
N-4813	x				Range Finder Mask Assembly	23
N-4814	x				Range Finder Tube and Lens Assembly.	24
N-4815	x				Lens - Range finder	24
N-4818	x				Retainer - Range finder lens.	22
N-4820	x				Body - Range finder	24
N-4821	x				Case Assembly.	38
N-4822	x				Back Assembly.	1,2
N-4823	x				Bed and Arms Assembled.	28
N-4824	x				Button - Body release	3
N-4860	x				Rewind Knob Assembly	3
N-4880	x	x	x	x	Glass - Meter	4A
N-4882	x				Pad - Range finder housing.	10
N-4883	x				N.S. Meter Assembly.	4A
N-4885	x				Guide - Body release (New style).	12
N-4893	x				Rivet	10
N-4919	x				Button - Counter setting.	10
N-4920	x				Sleeve - Counter setting button.	10,20A
N-4921	x	x	x	x	Roller - Film.	2
N-4928	x				Screw - Range finder to case	14
N-4929	x				Range Finder Lens Assembly	20A
N-4937	x				Screw - Range finder lens frame.	20A
N-4942	x				Plate - Beam splitter retaining.	22
N-4943	x				Beam Splitter - Range finder	22
N-4945	x				Screw.	22,23
N-4956	x				Lens - Range finder	22
N-4958	x				Screw.	21,22,24
N-4960	x				Washer.	21,23
N-5181	x	x	x	x	Gear - Winding shaft.	34
N-5182	x	x	x	x	Spacer - Winding shaft pinion.	34
N-5183	x	x	x	x	Pawl - Winding shaft.	34
N-5184	x	x	x	x	Gear - Film advance drive.	34
N-5185	x	x	x	x	Winding Shaft Assembly.	35
N-5260	x	x	x	x	Bushing and Gear Assembly.	35
N-5352	x				Plate - Adjusting (.012)	23
N-5353	x				Plate - Adjusting (.002)	23
N-5354	x				Plate - Adjusting (.004)	23
N-5533	x	x			Strip - Back.	2

SYNCHRO COMPUR SHUTTER FOR RETINA IIc, IIIc, IIIC CAMERAS

N-2739 x x x x Screw - Lens lock ring to front lens assembly. 45

SYNCHRO COMPUR SHUTTER FOR RETINA IIc, IIIc, IIIC CAMERAS

Part No.	IIC	IIIc	IIIc	IIIC	Part Name	Fig. No.
	O.S.	N.S.				
N-2963	x	x	x	x	Screw - Terminal wire to flash terminal assembly.....	42
N-4036	x				Ring - Mounting (For shutters below serial No. 1-402-665)	47
N-4038	x				Ring Assembly.....	41
N-4244	x	x	x	x	Ring Assembly.....	41
N-4245	x	x	x	x	Screw - Ring assembly to shutter case.....	41
N-4246	x	x	x	x	Screw - Shutter locating.....	41
N-4247	x	x	x	x	Screw - Ring assembly to shutter case.....	41
N-4248	x	x	x	x	Rivet - Flash terminal assembly to ring.....	43
N-4249	x	x	x	x	Wire - Terminal.....	42
N-4251	x	x	x	x	Rack - Setting	41
N-4252	x	x	x	x	Guide	41
N-4253	x	x			Ring - Shutter Mounting (For shutters below serial No. 1-402-665)	47
N-4255	x	x	x	x	Ring - Lens lock.....	45
N-4257	x	x	x	x	Block - Lens serial number (blank)	47
N-4258	x	x	x	x	Screw - Lens serial number block.....	47
N-4260	x	x	x	x	Insulator.....	42
N-4261	x	x	x	x	Screw - Insulator to ring	42
N-4267	x	x			Ring - Speed (For shutters below serial No. 1-402-665)	47
N-4268	x	x	x	x	Cam - Speed	47
N-4269	x	x	x	x	Cocking Ring and Spring Assembly.....	48
N-4270	x	x	x	x	Spring - Cocking ring	48
N-4271	x	x	x	x	Lever - DEP and timer lock.....	48
N-4272	x	x	x	x	Spring - DEP and timer lock lever	48
N-4273	x	x	x	x	Trigger and Spring Assembly	48
N-4274	x	x	x	x	Spring - Trigger	48
N-4275	x	x	x	x	Synchro Cover Plate Assembly	49
N-4276	x	x	x	x	Screw - Synchro cover plate, lower	49
N-4277	x	x	x	x	Screw - Synchro cover plate, upper	49
N-4278	x	x	x	x	Spring - Main drive lock	49
N-4279	x	x	x	x	Spring - Synchro gear	49
N-4280	x	x	x	x	Synchro Contact Assembly	49
N-4281	x	x	x	x	Synchronizing Lever Assembly	49
N-4282	x	x	x	x	Spring - Synchronizing lever	49
N-4283	x	x	x	x	Synchro Sector Assembly	49
N-4284	x	x	x	x	Synchro Gear Assembly	49
N-4285	x	x	x	x	Spring - Blade controller check	50
N-4286	x	x	x	x	Spring - Synchro lock	52
N-4287	x	x	x	x	Lever - Bulb	51
N-4288	x	x	x	x	Screw - Bulb lever	51
N-4290	x	x	x	x	Spring - Self timer	51
N-4291	x	x	x	x	Cocking Ring Gear Assembly	48
N-4292	x	x	x	x	Spring - Main drive	50
N-4293	x	x	x	x	Main Drive Assembly	50
N-4294	x	x	x	x	Plate - Synchro gear spring anchor	52
N-4295	x	x	x	x	Screw - Synchro gear spring anchor plate	52
N-4296	x	x	x	x	Screw - Retard gear train, short	51
N-4297	x	x	x	x	Screw - Retard gear train, long	51
N-4298	x	x	x	x	Retard Gear Train Assembly	51
N-4299	x	x	x	x	Screw - Self-timer gear train	50
N-4300	x	x	x	x	Self-timer Gear Train Assembly	50
N-4301	x	x	x	x	Stop - Main drive gear	52
N-4302	x	x	x	x	Screw - Main drive gear stop	52
N-4304	x	x	x	x	Screw - Shutter front tube	52
N-4305	x	x	x	x	Blade Controller Ring Assembly	52
N-4306	x	x	x	x	Diaphragm Pointer Assembly (old style)	46
N-4307	x	x	x	x	Screw - Diaphragm pointer (old style)	46
N-4308	x	x	x	x	Diaphragm Control Ring Assembly (old style)	46
N-4309	x	x	x	x	Screw - Diaphragm control ring assembly (old style)	46
N-4310	x	x	x	x	Synchro Selector Ring Assembly	46
N-4311	x	x	x	x	Spacer - Diaphragm control ring	46
N-4312	x	x	x	x	Screw - Case	53
N-4313	x	x	x	x	Blade - Shutter	53
N-4314	x	x	x	x	Mechanism Plate Assembly	53
N-4315	x	x	x	x	Diaphragm Retainer Plate Assembly (For shutters below serial No. 1-402-665)	53

Always give PART NUMBER and NAME when ordering parts

SYNCHRO COMPUR SHUTTER FOR RETINA IIc, IIIc, IIIC CAMERAS

Part No.	IIc	IIIc	IIIC	IIIC	Part Name	Fig.
	O.S. N.S.					
N-4316	x	x	x	x	Screw - Diaphragm retainer plate	53
N-4317	x	x	x		Diaphragm Wing Assembly (For shutters below serial No. 1-402-665)	53
N-4318	x	x	x		Diaphragm Control Plate Assembly (For shutters below serial No. 1-402-665)	53
N-4319	x	x	x	x	Case Assembly	53
N-4320	x	x	x	x	Flash Terminal Assembly	43
N-4345	x	x			Shutter Complete (Lens opening scale below lens) for Cameras below Serial No. 272330	41
N-4346	x				Shutter Complete (Lens opening scale below lens) for Cameras below Serial No. 272330	41
N-4349	x	x	x	x	Retainer - Front lens mount	47
N-4350	x	x	x	x	Screw - Front lens mount	47
N-4357	x	x	x	x	Lever - Synchro lock	54
N-4358	x	x	x	x	Stud - Synchro lever	54
N-4359	x	x	x	x	Lever - Synchro	54
N-4360	x	x	x	x	Stud - Synchro lever	54
N-4361	x	x	x	x	Stud - Synchro gear	54
N-4362	x	x	x	x	Stud - Time release lever	54
N-4363	x	x	x	x	Lever - Time release	54
N-4364	x	x	x	x	Stud - Pallet	54
N-4365	x	x	x	x	Pallet	54
N-4366	x	x	x	x	Rivet - Contact plate	55
N-4367	x	x	x	x	Plate - Contact	55
N-4368	x	x	x	x	Block - Contact	55
N-4369	x	x	x	x	Point - Contact	55
N-4370	x	x	x	x	Stud - Synchro selector tension spring	55
N-4371	x	x	x	x	Spring - Synchro selector tension	55
N-4372	x	x	x	x	Ring - Mounting (For shutters above serial No. 1-402-665)	47
N-4373	x	x	x	x	Ring - Diaphragm index (For shutters above serial No. 1-402-665)	47
N-4374	x	x	x	x	Ring - Diaphragm (For shutters above serial No. 1-402-665)	47
N-4375	x	x	x	x	Pointer - Diaphragm (new style)	46
N-4376	x	x	x	x	Screw - Diaphragm pointer (new style)	46
N-4377	x	x	x	x	Ring - Speed (For shutters above serial No. 1-402-665)	47
N-4378	x	x	x	x	Screw - Diaphragm control ring (new style)	46
N-4379	x	x	x	x	Diaphragm Control Ring Assembly (new style)	46
N-4380	x	x	x	x	Wing Assembly (For shutters above serial No. 1-402-665)	53
N-4381	x	x	x	x	Diaphragm Plate Assembly (For shutters above serial No. 1-402-665)	53
N-4382	x	x	x	x	Diaphragm Control Plate Assembly (For shutters above serial No. 1-402-665)	53
N-4390	x	x	x		Shutter Complete (Lens opening scale above lens) for Cameras above Serial No. 272330	41
N-4391	x				Shutter Complete (Lens opening scale above lens) for Cameras above Serial No. 273300	41
N-4398	x				Ring - Diaphragm index (For shutters above serial No. 1-402-665)	47
N-4399	x				Ring - Speed (For shutters above serial No. 1-402-665)	47
N-4400	x				Ring - Speed (For shutters below serial No. 1-402-665)	47
102975	x	x	x	x	Screw - Flash terminal assembly to ring (To facilitate repairing, use No. 080 tap)	43

KODAK RETINA FIELD CASE, Model B, for Kodak Retina IIc, IIIc, and IIIC CAMERAS

Part No.	Part Name	Fig.	Part No.	Part Name	Fig.
N-4337	Case Bottom Assembly	59	N-4396	Stud - Loop	59
N-4338	Shoulder Strap Assembly	59	N-4402	Cap - Snap button	59
N-4339	Cover Assembly	59	N-4403	Socket - Snap button cap	59
N-4392	Screw - Camera retaining	59	N-4404	Post - Snap button	59
N-4393	Plate - Camera retaining screw	59	N-4405	Stud - Snap button post	59
N-4394	Plate - Snap button stud catch	59	N-4406	Sleeve - Snap button post stud	59
N-4395	Loop Assembly	59	121934	Stud - Shoulder strap	59

Always give PART NUMBER and NAME when ordering parts

EASTMAN KODAK COMPANY • ROCHESTER 4, NEW YORK